

### Test&Measurement

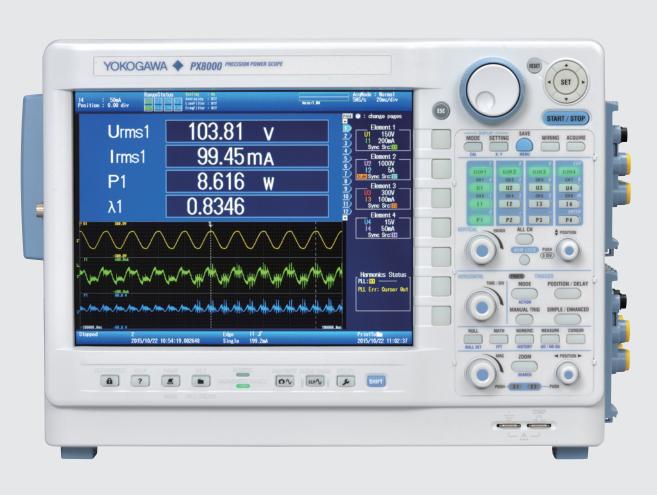

## Where power meets precision

PX8000 Precision Power Scope

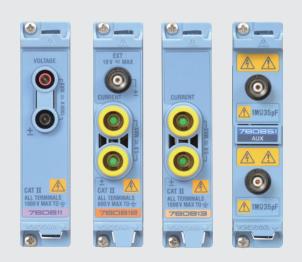

Bulletin PX8000-01EN

Yokogawa 🔶

The PX8000 brings together Yokogawa's world-leading expertise in power measurement with our long heritage in oscilloscope design to deliver a true test and measurement revolution: the world's first precision power scope.

With the launch of the PX8000, R&D professionals need no longer compromise on their need for high-accuracy time-based power measurement, a need that conventional power analyzers and oscilloscopes were never designed to meet.


As more and more innovation focuses on energy consumption and the integration of electronics into power-based systems, so more and more engineers are demanding accuracy and precision from their power measurement.

The PX8000 delivers:

**Insight** – Precision power measurement gives true insights into energy consumption and performance.

**Confidence** – Proven, high-quality production means the PX8000 can be relied upon to deliver over extended periods of time.

**Familiarity** – Users experience a short learning curve thanks to features familiar to anyone who's used to power measurements or oscilloscopes.

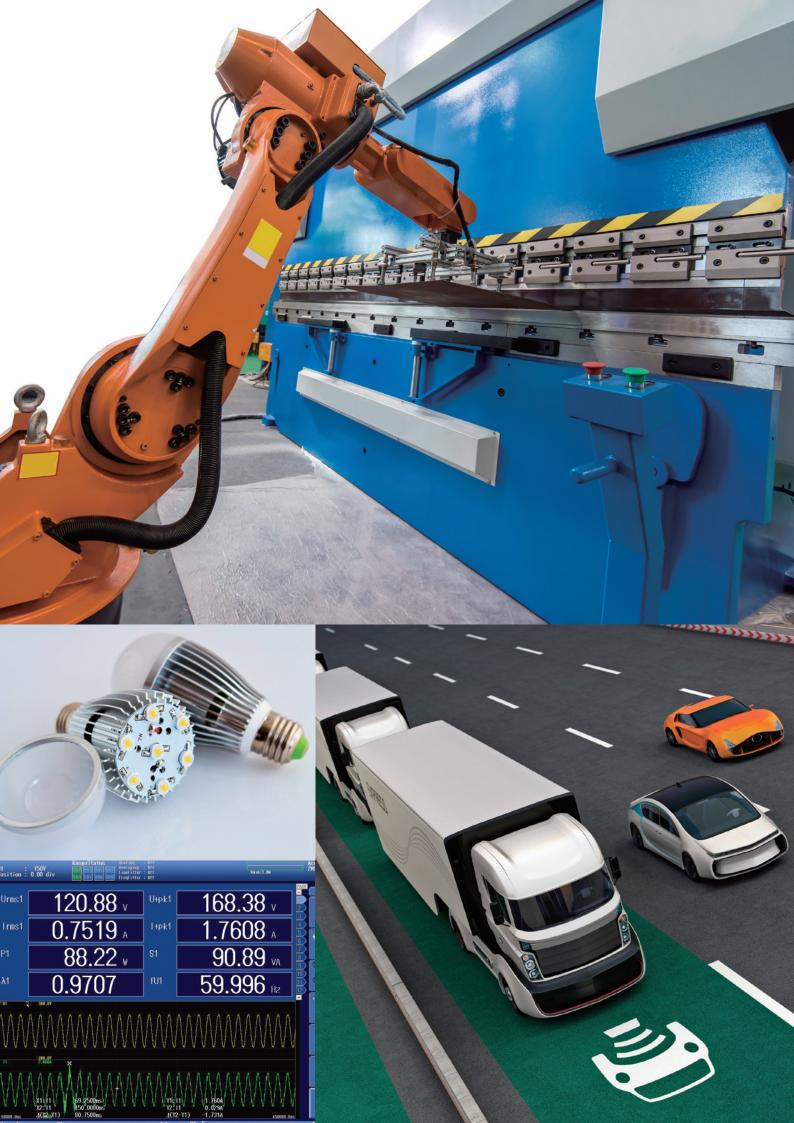

## Features and benefits

#### Transient power measurement and analysis

The PX8000 has a number of innovative features that support the crucial measurement and analysis of transient power profiles.



## Simultaneous power calculation


The PX8000 provides simultaneous voltage and current multiplication to give real-time power sampling. This supports both transient measurement (as standard) and numerical values averaged across the sample period. The available measurement period will depend on the sample rate and the memory size.



#### Cycle-by-cycle power trend measurement

Trend measurements between waveforms can be calculated by mathematical functions (up to four million points). The PX8000 provides graphical displays of voltage, current and power readings. The waveforms can be inspected for specific numerical values at any point and averages can be calculated between start and stop cursors.

Such capabilities are particularly important when analyzing and optimizing the performance of, for instance, lighting and electric motors at start-up.



## Specific time-period measurement


The PX8000 supports the capture of power waveforms over specific periods of time through the definition of start and stop "cursors". This is particularly useful for examining transient phenomena and in the design of periodically controlled equipment. To ensure that equipment such as photocopiers complies with energy standards, for instance, it is vital to measure power consumption across a range of different modes from "sleep" to full activity - and all the transient states in between.



## X-Y display and phase analysis

For certain tasks it is important to be able to display values on an X-Y axis. Motors, for instance, are characterized by an ST-curve that shows the relationship between speed and torque. The PX8000 supports such displays as standard. It can also display lissajous waveforms of input and output for phase analysis.





## Capturing sudden or irregular phenomena

Abnormal phenomena discovered during repeated high-frequency measurements can often be hard to isolate, disappearing from the screen almost as soon as they appear. The PX8000 has an always-active History function that automatically records up to 1000 historical waveforms. These waveforms can be recalled and redisplayed at any time. They can also used to redefine trigger conditions.

Historical waveforms are explored via condition-based searches. Specific abnormal phenomena, for instance, can be located by searching only for waveforms that cross – or do not cross – a certain rectangular zone. Other search parameters include waveform amplitude and RMS.



## Long-period data capture and analysis

A PC application software for the PX8000, called PowerViewerPlus, can be used to capture waveform data for further analysis. This extends the ability of the PX8000 to use mathematical functions to analyze longer term performance.

PC connection is via standard Ethernet/USB/GP-IB connections. The user-friendly software displays waveforms in a simple and clear graphical style that will be familiar to users of Yokogawa's popular Xviewer software.

Researchers who want to use their own analysis software will be able to establish a connection to the PX8000 via the LabVIEW driver.



#### FFT analysis

The PX8000 features arithmetical, time-shift, FFT and other computations that enable users to display waveforms with offsets and skew corrections. Users can also define their own computations via equations that combine differentials, integrals, digital filters and a wealth of other functions.



#### Simultaneous harmonic measurement

The PX8000 makes it possible to simultaneously measure the harmonic components of voltage and current waves as well as the harmonic distortion factor. Harmonic measurements take place in parallel with conventional voltage and current measurement. Harmonics up to the 500th order of the fundamental can be measured.

# The PX8000 in detail

Display format selection: Comprehensive range of display functions for power analysis, including numeric/waveform/ vector/bar/X-Y graphs.

#### 2 Wiring selection:

1

3

4

5

Choose between different wiring, according to the relevant electricity system: single-phase, two- and three-wire (1P2W/1P3W/3P3W) and three-phase, three- and four-wire (3P3W/3P3W(3V3A)/3P4W) connectivity.

#### Acquire settings:


Memory size setting and History function for displaying and analyzing irregular waveform data. Sampling frequency is determined by memory size and time axis selections.

#### Module parameter settings:

Measurement parameters and options include voltage/current (direct/sensor) ranges, autoranging, offset, vertical zoom, filter, scaling and synchronized sources.

#### Power analysis settings:

Analytical functions include cycle-bycycle trend calculation, specific timeperiod measurement, and harmonic analysis and FFT analysis. There is a null setting for capturing sensor input conditions.

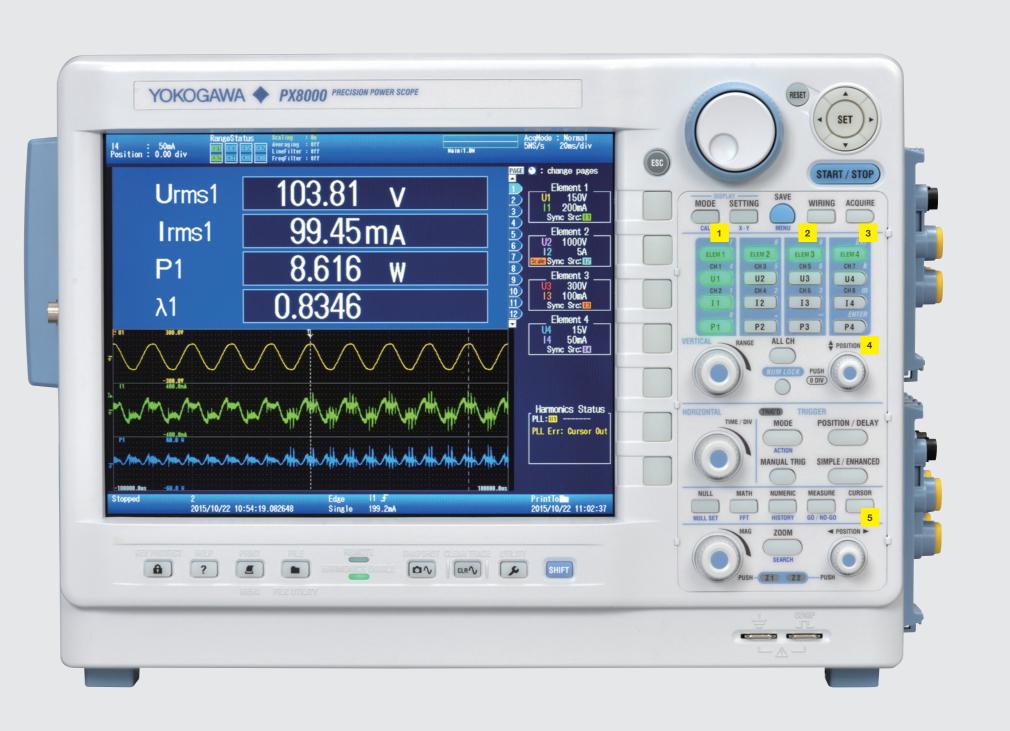



## Modules



#### De-skewed measurement set-up

Sensors can introduce phase errors or skew between the current and voltage inputs.



#### 1 Voltage module

12-bit sampling at up to 100 MS/s
DC to 20 MHz bandwidth\*
1.5 V to 1000 Vrms direct input
45 Hz to 1 kHz accuracy: ±(0.1% of reading, +0.1% of range)

#### 2 3 Current module

12-bit sampling at up to 100 MS/s
DC to 10 MHz bandwidth\* (direct input)
DC to 20 MHz bandwidth\* (sensor voltage input, 760812)
10 mA to 5 Arms direct input
50 mV to 10 Vrms sensor input (760812)
45 Hz to 1 kHz accuracy: ±(0.1% of reading, +0.1% of range)

Power measurement element includes voltage and current module (up to four modules).

#### Sensor and voltage measurement module (up to three modules can be installed) Auxiliary (AUX) module

12-bit sampling at up to 100 MS/s DC to 20 MHz bandwidth\* Up to 200 V (DC+ACpeak) via direct input Up to 1000 V (DC+ACpeak) via probe input Accuracy: ±1% of range (DC) Torque and speed sensor inputs Pulse input from 2 Hz to 1 MHz \* Bandwidth is specified at -3 dB point

#### Safety and error-prevention features

To prevent incompatibilities, the PX8000 will detect miss-matched current and voltage modules and flag them with an on-screen warning message.

The PX8000 also comes with a range of standard dedicated input connectors designed to prevent

incorrect or dangerous power connections. Using these connectors, it is not possible, for instance, to connect a current to a voltage input terminal.

A tie-wrap system prevents accidental current terminal disconnection.



Yokogawa 🔶

## Connectivity

7



#### Long phenomena capture

The large internal memory of up to 100 M Points enables long term measurements to be made at high and appropriate sample rates.



• Error for when used in conjunction with the AC/DC current sensor

Add the error of the AC/DC current sensor and that of the power analyzer.

1	<b>EXT I/O</b> The PX8000 can be used to send a GO/ NO-GO signal based on set conditions; equally external signals can be used to trigger measurement and analysis.
2	<b>EXT CLK IN</b> Sampling can be timed to an external signal (up to 9.5 MHz)
3	TRIGGER IN External trigger input
4	TRIGGER OUT External trigger output
5	VIDEO OUT Video signal output for enhanced display on analog RGB displays
6	<b>USB-PC</b> Enables control from a PC
7	Ethernet 1000 BASE-T comes as standard
8	<b>GP-IB</b> General purpose interface bus
9	<b>SD card slot</b> SD- and SDHC-compliant (Up to 16 GB)
10	<b>USB</b> For connection to a range of peripherals including storage, keyboard and mouse
1	IRIG (/C20 option) Synchronize multiple instruments via an external time source
2	<b>Power supply for sensors (/PD2 option)</b> 4 outputs, ±15 Vdc, Max. 1.8 A/CH Dedicated shunt boxes and cables are prepared as well.
3	<b>Power supply for probes (/P4 option)</b> 4 outputs, ±12 Vdc, Total 1 A

## Power meets precision

R&D teams everywhere are coming to terms with the need for new levels of precision in power measurement. With pervasive microprocessor control and on-going pressure to reduce energy consumption, the lines between electrical and electronic engineering continue to blur – and the need for a new class of hybrid measurement is emerging.

Traditional power measurement instruments cannot provide accurate time measurements; oscilloscopes are not designed to measure power. The PX8000 is the world's first precision power scope, bringing oscilloscope-style time-based measurement to the world of power measurement.

The PX8000's time-based accuracy brings a new dimension to power analysis. It can capture voltage and current waveforms precisely, opening up applications and solutions for a huge variety of emerging power measurement problems.

#### **Focus on precision**

The PX8000 brings high-precision waveform capabilities to power measurement. Among the features unique to the PX8000 are:

#### **Multifunction snapshots**

Up to 16 different waveforms – including voltage, current and power – can be displayed side-by-side, giving engineers instant snapshots of performance.

#### **Detailed transient analysis**

The PX8000 supports the measurement of all power waveform parameters between precisely defined start and stop cursors.

#### Trend calculation

The PX8000 has built-in functions for the direct calculation of variables, such as root mean square (RMS) and mean power values, to enable the identification of cycle-by-cycle trends.

#### **De-skew compensation**

The PX8000's de-skewing function eliminates offsets between current and voltage signals that may be caused by sensor or input characteristics.

#### The Yokogawa power analyzer series

The PX8000 is the new flagship product for Yokogawa's range of industry-proven power analyzers. Yokogawa's first power measurement instrument was designed back in the 1960s, and its power analyzers have played an important role in sustainable industrial development ever since.

## isoPRO. – pioneering measurement technology

i**s**oPRO.

The PX8000 is powered by Yokogawa's isoPRO... technology, which offers industry-leading isolation performance at the highest speeds. isoPRO core technology, designed with energy-saving applications in mind, delivers the performance needed to develop high-efficiency inverters that operate at high voltages, large currents and high frequency.

#### <sup>9</sup> Focus on power

Innovators everywhere are focusing on key questions that can only be answered by measuring power precisely.

How can we minimize energy loss? How can we boost performance? How can we efficiently use renewable energy sources?



Inverter performance and efficiency



Photovoltaic cells for solar power



Smart grid solutions



Electric/hybrid vehicles



Wireless power charging

## **Applications**

The PX8000 is an immensely versatile instrument, unlocking precision power measurement capabilities for researchers working on everything from renewable power to advanced robotics. Anywhere that power consumption is at a premium – which means almost anywhere power is consumed – can benefit from the introduction of the PX8000's precision measurement and analysis capabilities.

The following pages cover some typical applications for the PX8000. For help in designing your own measurement strategy, please contact your usual Yokogawa representative.












## Inverter and motor testing

**Overview** 


Electric and hybrid vehicles have many electrical and mechanical components, and overall performance evaluation requires measuring the efficiency of both. The PX8000's flexibility, accuracy and wide bandwidth make it ideal for drawing together the range of power readings needed to optimize the efficiency of boost circuits and inverters – two key elements in overall electric vehicle performance.

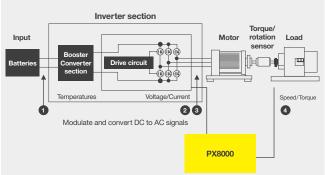

(1) Energy measurement of batteries

<sup>(2) (3)</sup> Efficiency measurement of boost circuit and drive circuit

(4) Efficiency measurement of inverter system above transient behavior measurement

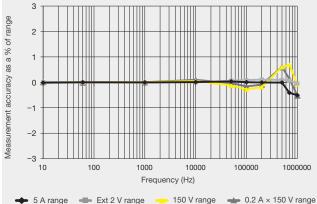



#### The PX8000 advantage

#### Wide bandwidth

The vertical resolution of analog/digital conversion is one of the most important factors in precision measurement. The PX8000 has 12-bit resolution with 100 MS/s sampling and 20 MHz bandwidth. This means the PX8000 can be used for accurate measurement of inverter pulse shapes, which can then be used to fine-tune inverter efficiency.

## Transient measurement by cycle-by-cycle trend

The PX8000's ability to analyze cycle-by-cycle trends makes it ideal for the measurement of transient effects. During the start-up phase of an inverter and motor, for example, current increases can be analyzed in each cycle. And when the load changes rapidly, the engineers can gain insights that will enable them to improve the control of the inverter.

#### Harmonic and FFT analysis

The PX8000 has both harmonic and FFT measurement capabilities for frequency-based analysis. The Harmonic function can measure fundamental waveforms from 20 Hz to approximately 400 kHz. This is particularly useful for analyzing higher harmonic component and causes of noise in electromechanical systems.


## Offset cancels by individual NULL function

A common problem when testing inverter motors is the presence of ambient noise that can mean test values are nonzero even before testing begins. The PX8000's offset capabilities mean such effects can be nullified and specific inputs can be isolated for testing and analysis.

## Reactor loss measurement of inverter boost circuits

#### **Overview**

A reactor is used to filter out noise and boost voltage levels prior to the use of an inverter. It consists of an electromagnetic material core and a coil. A main focus for electrical engineers is to reduce power loss across the total inverter system, and reactor performance is of particular interest. There are two potential evaluation methods: direct loss measurement of the reactor and iron loss measurement. The PX8000 supports either methodology because it can accommodate both high frequency measurement and low-power-factor conditions.

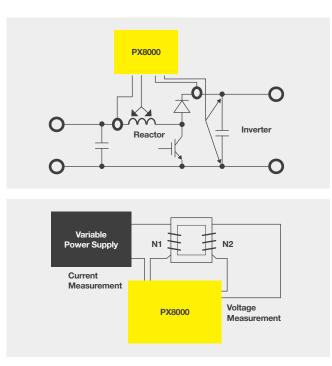

#### The PX8000 advantage

#### Low-power-factor measurement

Higher sampling rates and broad bandwidth make the PX8000 particularly useful for testing devices, such as transformers and reactors, that have lower power factors. It is particularly important to measure the precise power consumption of such devices at high frequency.

#### **De-skew functionality**

To analyze power consumption in low-power-factor devices it is particularly important to minimize any time differences between voltage and current caused by sensor input characteristics. The PX8000 provides precise de-skew adjustment to compensate for this time difference.

#### Core loss measurement under high frequency

Analyzing reactor core loss is an example of how the PX8000's user-defined functions can be utilized to provide an instant analysis of system performance.

In this example, core loss is calculated based on primary coil current and secondary coil voltage (using readings from an Epstein device), while magnetic flux density (B) and magnetic field (H) are calculated by factoring in input frequency, cross-sectional area and other parameters. All values can be displayed directly by the PX8000.

Core loss = Power value (W) ×	N1
	N2

Measurement items specified using user-defined function as follows:

B =	Voltage (mean)			
	$\sqrt{2} \Pi \times Current$ freq. × N2 × cross section			
H =	N1 × Primary coil peak current			
	Effective magnetic path length			


## **Transient responses of industrial robots**


#### **Overview**

To evaluate motor-driven robots, power consumption of all motors and controllers are measured throughout all operational speeds and action patterns. Design engineers need to measure inrush voltage, current and power over the pattern of repeated actions. Efficiency is calculated by comparing mechanical output with input power.

During actual operating conditions, the time to accelerate and decelerate such motors can range from several hundred milliseconds to several seconds. As a PWM-driven motor rotates from the reset position to the top speed, the drive frequency changes from DC to several hundred Hz.

The PX8000 gives design engineers insight into power consumption and efficiency throughout a robot's operational performance.

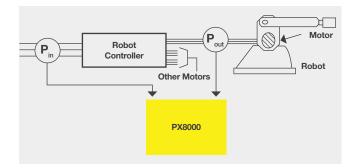

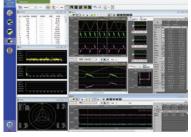

PowerViewerPlus

#### The PX8000 advantage

#### Specific time-period analysis

The PX8000 supports the measurement of waveform data between specific Start/Stop cursors. Combined with its multi-channel capabilities and its Long memory and History functions, this makes the PX8000 particularly useful in rating a robot's operational power consumption.

## Efficiency measurement of boosters, inverters and motors

A single PX8000 unit can measure both the input/ output power of inverters and the mechanical output of a motor. By installing three power units and one AUX module, the PX8000 can be configured to provide an instantaneous measure of component efficiency.

## Transient measurement by trend computation

With its instantaneous power calculations, the PX8000 is ideal for evaluating and optimizing transient effects. Its cycle-by-cycle trend analysis provides further insights into this crucial area of robotics engineering.

#### Longer time-period measurement


To analyze some robotic operations, it may be necessary to perform cycle-by-cycle trend analysis over a long period of time up to 20 minutes. The PowerViewerPlus software extends this mathematical capability to enable deep insights to be obtained from the data.

## Wireless charger efficiency measurement

#### **Overview**

The development of wireless charging technology for mobile devices like smartphones and tablet devices is a focus for research. Automotive manufacturers are looking into the possibilities of charging electric vehicles wirelessly too.

Wireless charging depends on two electromagnetic coils being configured to support particular frequency profiles. Efficient power transfer and the prevention of power loss are naturally particularly important. The PX8000 is ideally suited for measuring such systems because of its ability to operate at high frequencies up to several hundred kHz and low power factors.

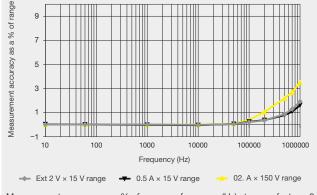

Measurement accuracy as a % of range vs. frequency (Hz) at power factor = 0.

#### The PX8000 advantage

## Wireless charger efficiency evaluation


To evaluate the efficiency of wireless transfer (including inverters), at least three power measurement elements are required. The PX8000, with its four input channels, can analyze the performance of the whole system simultaneously.

## Low-power-factor device measurement

The PX8000's higher sampling rates and broad bandwidth make it ideally suited for wireless power transfer systems. (The PX8000 supports 12-bit resolution, sample rates of up to 100 MS/s and a 20 MHz bandwidth.) Crucially, this means the PX8000 supports the measurement of low-power-factor systems operating at very high frequencies.

#### **De-skew functionality**

Because the PX8000 provides a de-skew function, differences between voltage and current that are introduced by sensor and input characteristics can be compensated for and therefore eliminated from the analysis of low-power-factor systems.

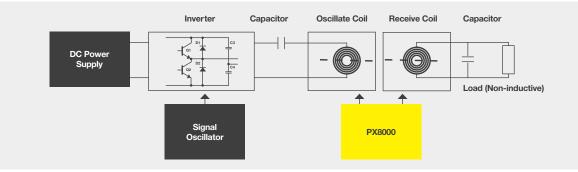


### **Power distribution**

#### **Overview**

Power distribution systems have to maintain constant voltage and constant power during load switching or in the case of a short circuit. Distribution protectors or circuit breakers for three-phase electricity systems must therefore be tested at transient voltage and power levels.

The PX8000 can capture fluctuating voltage and current waveform, calculate power parameters (including voltage and current values), determine an average over a specified period and display all values.

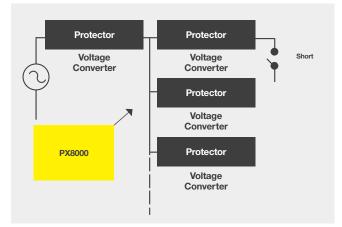

#### The PX8000 advantage

## Simultaneous three-phase data capture

To evaluate three-phase electrical systems, at least three power measurement inputs are required. The PX8000 not only has four inputs but also enables the simultaneous capture and display of voltage and current across all three phases.

#### Specific time-period measurement

For a true evaluation of distribution protection, it is necessary to measure a full cycle of voltage, current and power values half a cycle after the recovery from a short circuit. The PX8000 can easily be set up to focus on such a specific period.

#### Harmonic and FFT analysis

The PX8000 has capabilities for both harmonic measurement and FFT for frequency analysis. The harmonic function can measure fundamental frequencies from 20 Hz to approximately 400 kHz, and FFT has 1 k to 100 k points calculation across up to two channels. Such measurements are vital for identifying harmonic currents and identifying sources of noise.

#### Specifications of PX8000 and the modules

#### PX8000

Shape	Plug-in input module style
Module structure	Voltage module, Current module and Auxiliary (AUX) module
	Power measurement element: one Voltage module and one Current module Maximum 8 modules (maximum 4 power measurement elements) can be installer
	AUX module can be installed maximum 3 (at least one power measurement
	elements must be installed).
Maximum channel number	8 ch, combination of Voltage/Current modules and AUX module
Maximum record length	Standard 10 M points for each voltage and current regardless of the installed number of modules.
	The memory cannot be combined, each memory of module is individual.
	50 M points for each voltage and current regardless of the installed channel
	number of input modules when /M1 option is installed.
	100 M points for each voltage and current regardless of the installed channel
	number of input modules when /M2 option is installed.
	760811/760812/760813) Specifications
Input terminal type	Voltage: Plug-in terminal (female)
	Current: Direct input: Plug-in terminal (male) External current sensor input: isolated BNC (760812)
Input format	Voltage: Floating input, resistive voltage divider
	Current: Floating input through shunt
Measurement range	Voltage: 1.5/3/6/10/15/30/60/100/150/300/600/1000 Vrms
ů.	(crest factor = 2 at rated range input)
	Current: Direct input (5 A)
	10 m/20 m/50 m/100 m/200 m/500 m/1/2/5 Arms (Crest factor = 2 at rated range input)
	Current: External current sensor input (760812)
	50 m/100 m/200 m/500 m/1/2/5/10 Vrms (Crest factor = 2)
Line filter	Select from OFF, 500 Hz, 2 kHz, 20 kHz, and 1 MHz.
Frequency filter	Select from OFF, 100 Hz, 500 Hz, 2 kHz and 20 kHz.
A/D converter	Resolution: 12 bit
Max sample rate	Conversion ratio (sampling period): Approx. 10 ns. (100 MS/s) For harmonic measurement, please refer to harmonic function.
uxiliary (AUX) module (760851)	
Number of input channels	2, switchable analog or pulse input
Input coupling	AC, DC, or GND
Input format	Isolated unbalanced
Frequency characteristics	DC to 20 MHz (-3 dB point when sine wave of amplitude ±3 div is applied)
Voltage-axis sensitivity setting	50 mV to 100 V (1-2.5-5 steps) (when using 1:1 probe attenuation)
A/D conversion resolution	12 bit
Temperature coefficient Bandwidth limit	±(0.1% of range/"C) (typical)
Bandwidthiiniit	Select from OFF, 2 MHz, 1.28 MHz, 640 kHz, 320 kHz, 160 kHz, 80 kHz, 40 kHz, 20 kHz, and 10 kHz
	Cut-off characteristics: -18 dB/OCT (when 2 MHz, Typical)
Accuracy (analog)	DC: ±1% of range (typical) * Measured under the standard operating conditions
Frequency measurement range	2 Hz to 1 MHz, displaying range: 1.8 Hz to 2 MHz
Pulse width	500 ns or wider
Accuracy (pulse)	±(0.05% of reading) ±1 count error (10 ns), Except, the observation time is greater or equal to 300 times the period of the pulse.
igger Function	
Trigger mode	Auto, Auto Level, Normal, Single, N Single, or On Start
imple Trigger	
Trigger source	Un, In, Pn, AUXn, EXT, LINE, or Time n = channel number
Time Trigger	Date (year, month, and day), time (hour and minute), and time interval
	(10 seconds to 24 hours)
nhanced trigger	
Trigger source	Un, In, Pn, AUXn or EXT
Trigger type	$A \rightarrow B(N)$ : A Delay B: Edge on A: AND: OR: B>Time: B <time: b="" out:<="" td="" time=""></time:>
	B Between: Period: T>Time T <time: t1<t<t2:="" t<t1,="" t<t2:="" td="" wave="" window<=""></time:>
me Base	
Time axis setting (Observation	Time/div setting: 100 ns/div to 1 s/div (1-2-5 step), 2 s/div, 3 s/div, 4 s/div,
time) "Time/div"	5 s/div, 6 s/div, 8 s/div, 10 s/div, 20 s/div, 30 s/div, 1 min/div and 2 min/div Observation time: 1 µs to 1200 s
isplay	
Display	10.4 inch TFT LCD display
Number of dots	1024 × 768 XGA
Waveform displaying dot size	801 × 656 (Waveform Display)
Displaying format	Combination:
Sopiaying IUTTilat	Maximum 2 types of format can be displayed
	Numeric 4 items/ 8 items/ 16 items/Matrix/All/Single List/Dual List/Custom Wave 1/2/3/4/6/8/12/16
	Bar Single/Dual/Triad
	Vector Single/Dual
	ZOOM1 and ZOOM2 (divided lower display area) FFT1 and FFT2 (divided lower display area)
	XY1 and XY2 (divided lower display area)
Display update	Depends on setting of observation time and record length
umerical Display	
Maximum digit of numeric display	/ Selected full 5 digits (displaying 99999), or 6 digits (999999)
Number of displayed items	Select from 4, 8, 16, Matrix, All, Single List, Dual List, and Custom
aveform Display	
Displaying items	Maximum 16 waveforms
	Voltage, current and power of Element 1 Voltage, current and power of Element 2 (or AUX3 and AUX4 of Element 2)
	Voltage, current and power of Element 3 (or AUX5 and AUX6 of Element 3)
	Voltage, current and power of Element 4 (or AUX7 and AUX8 of Element 4)
	MATH 1 to MATH 8
ector Bar Graph Display (option	n)
	Diaplay the phase angle between the fundamental voltage signal and
Vector display	Display the phase angle between the fundamental voltage signal and fundamental current signal as a vector.
Vector display	fundamental current signal as a vector

Zoom	Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled.
FT Display	
FFT -Y display	Power spectrum of input waveform, Maximum two windows
X-Y Display	The X and Y axes can be selected from Un/In/Pn/AUXn, MATHn (Maximum
	four traces, two windows).
leasurement Function and Con Crest Factor	Up to 200 (effective minimum input). Up to 2 (rated input)
	CfU: Voltage crest factor, Cfl: Current crest factor
Measurement period	Measurement period to calculate numerical values - Period of measurement update cycle based on zero crossing or external gate signal source signal 1000 critical text for here and the mean state of the source o
Wiring method	<ul> <li>- 8192 points for harmonic measurement from specified start cursor</li> <li>1P2W (Single phase 2 wire), 1P3W (Single phase 3 wire), 3P3W (3 phase</li> </ul>
Scaling	3 wire), 3V3A (3 phase 3 wire, 3 power meter method), 3P4W (3 phase 4 wire 0.0001 to 99999.9999 can be set for scaling of VT ratio, CT ratio and power ratio when external current sensor, VT or CT are used for the input
	Linear scaling function is available for AUX module (760851)
requency measurement	
Number of displayed digits Max frequency	Full 5 digits (99999) 5.0000 MHz
Accuracy	±0.1 of reading
Frequency Measurement filter	Same as Zero-cross filter (OFF/100 Hz/500 Hz/2 kHz/20 kHz)
armonics measurement	
Method Frequency range	PLL synchronization method (not available for external sampling clock function The range for the fundamental frequency of the PLL source is 20 Hz to 409.6 kHz, and sampling frequency is more than 2 MS/s. Time/div is 2 ms/div or higher. ACQ Time Base is set to Int (EXT TRG IN source: 20 Hz to 64 kHz)
FFT data length	8192, the analysis (calculation) start point can be set freely in the acquisition memory data. Acquisition data length is required twice of window length.
Window function	Rectangular
Sample rages, window width and upper limits of harmonic	Fundamental freq. Sample rate Window width Upper limit of harmonics 20 Hz to 600 Hz f × 1024 8 cycles 500 order
analysis	600 Hz to 1200 Hz f × 512 16 cycles 255 order
	1200 Hz to 2600 Hz         f × 256         32 cycles         100 order           2600 Hz to 6400 Hz         f × 128         64 cycles         50 order
	6.4 kHz to 409.6 kHz f × 64 128 cycles 30 order (Minimum sample rates are specified.)
Accuracy	Line filter OFF
	Add below expression to normal measurement
	Voltage & current: $(0.001 \times f + 0.001 \times n)\%$ of reading + 0.1% of range Power: $(0.002 \times f + 0.002 \times n)\%$ of reading + 0.2% of range
	f: unit kHz
Aveform data acquisition and	f: unit kHz
<b>Javeform data acquisition and</b> Acquisition mode	f: unit kHz display Normal Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless
	f: unit kHz display Normal Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting.
Acquisition mode	f: unit kHz display Normal Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps.
	f: unit kHz display Normal Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate
Acquisition mode	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps.
Acquisition mode Zoom Display format Snapshot	f: unit kHz display Normal Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled.
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded.
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically sorolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically sorolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded.
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately x 0.1 to x 100 Upper and lower limits can be used to set the scale.
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2's teps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically sorolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations): The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 01 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/div. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions Power parameters calculation	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations): The zoom position can be automatically storolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/div. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar calculated from the Voltage, Current and Power values
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations): The zoom position can be automatically sorolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to ×100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/div. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar calculated from the Voltage, Current and Power values Up to 24 items can be displayed PP. Amp, Max, Min, High, Low, Avg, Mid, Rms, Sidev, +OvrShoot, -OvrShoot,
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions Power parameters calculation Automated measurement of	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/dv. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar calculated from the Voltage, Current and Power values Up to 24 items can be displayed
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters	f: unit kHz display Normal Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically sorolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 01 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/div. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms calculated from the Voltage, Current and Power values Up to 24 items can be displayed P-P, Amp, Max, Min, High, Low, Avg, Md, Rms, Sdev, +OvrShoot, -OvrShoot, Rise, Fall, Freq, Period, +Width, -Width, Duty, Pulse,Burstt, Burst2, AvgFreq, AvgPeriod, HTTY, ht27Y, ht1XY, ht1XY, Int2XY (IntegPower/IntegCurrent) Int2hXY (IntegPower/IntegCurrent)
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions Power parameters calculation Automated measurement of	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations): The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/dv. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power values Up to 24 items can be displayed P-P, Amp, Max, Min, Hgh, Low, Avg, Mid, Rms, Sdev, +OvrShoot, -OvrShoot, Rue, Fall, Feq. Period, +With, -Width, Duty, Pulse,Burstt, Burst2, AvgFreq, AvgPeriod, IntTY, IntZY, IntXY, IntXY, IntXY (IntegPower/IntegCurrent) Int2NY (IntegPower/IntegCurrent)
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations): The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 01 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/div. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar calculated from the Voltage, Current and Power values Up to 24 items can be displayed P-P, Anp, Max, Min, High, Low, Avg, Mid, Rms, Sdev, +OvrShoot, -OvrShoot, Rise, Fall, Freq, Period, +Width, -Width, Duty, Puse,Burstt, Burst2, AvgFreq, AvgPeriod, IntTY, htt2Y, httXY, IntXY, IntXY, IntEgPower/IntegCurrent Int2NY (IntegPower/IntegCurrent)
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters Statistical processing	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations): The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to ×100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/div. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar calculated from the Voltage, Current and Power values Up to 24 items can be displayed PP. Amp, Max, Min, High, Low, Avg, Midt, Rms, Sdev, +OvrShoot, -OvrShoot, Ries, Fall, Freq, Period, +Width, -Width, Duty, Pulse,Burstt, Burst2, AvgFreq, ArgPeriod, IHTY, H127Y, INTXY, IntXY (IntegPower/IntegCurrent) IntPXY (IntegPower/IntegCurrent) Application items: Max, Min, Aya, Sdv, and Cnt Automatically measures the waveform parameters of the data in the acquisition memory and performs statistical processing on the parameters once per period.
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters Statistical processing Cyclic statistical processing	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dvi setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/dv. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar calculated from the Voltage, Current and Power values Up to 24 items can be displayed P-P, Amp, Max, Min, High, Low, Avg, Mid, Rms, Sdev, +OvrShoot, -OvrShoot, Rise, Fall, Freq, Period, +With, -Width, Duty, Pulse,Burst, Burst2, AvgFreq, AvgFerd, IntTY, IntTY, IntTXY, IntXY, InttXY (IntegPower/IntegCurrent) Int2NY (IntegPower/IntegCurrent) Application items: Automated measurement values of waveform parameters Statistical items: Max, Min, Avg, Sdv, and Cnt Automatically measures the waveform parameters of the data in the acquisition memory and performs statistical processing on the parameters statistical items: Automated measurement values of waveform parameters once per period. Maximum 8 expressions for waveforms MATH1 to MATH8, Maximum 4 Mooint, regarding Digital filter +, -, *, 1 SH, AG, LOGMAG, PHASE, FEAL, I, MAG Maximum 8, expressions for waveforms MATH1 to MATH6, Maximum 4 Mooint, regarding Digital filter +, -, *, 1 SH, AG, LOGMAG, PHASE, FEAL, I, MAG
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Rol Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters Statistical processing Cyclic statistical processing User defined computation (MATH) User defined computation	f: unit kHz display Normal Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/div setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations): The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/div. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power values Up to 24 items can be displayed P-P, Amp, Max, Min, High, Low, Avg, Mit, Rms, Sdev, +OvrShoot, -OvrShoot, Rue, Freq, Period, +Vilotty, -Width, Duty, Pulas,Burstl, Burst2, AvgFreq, AvgBerod, IntTY, IntZY, InttXY, InttXY (IntegPower/IntegCurrent) Intt2XY (IntegPower/IntegCurrent) Application items: Automated measurement values of waveform parameters Statistical items: Max, Min, Avg, Sdv, and Cnt Automatically measures the waveforms MATH1 to MATH6, Maximum 4 Mpoint, regarding Digital filter +, -, *, / SHFT, ABS, SORT, LOG, EXP, NEG, SIN, COS, TAN, ATAN, PH, DIF, DDE, INT, BIN, SSG, CUBE, FI, PE, P Wirth, PWH, LPWLH, PULL, PULX, DUTY, PLIST, FILT, FILTZ, HEIT, MEAN, LS, PS, PSD, CS, TF-, OH, MAG, LOGMAG, PHASE, FIEAL, IMAG THEND, TRENDOM, TRENDD, TRENDF, JH, LL, _XX and ZC Maximum 20 expressions, F1 to F20
Acquisition mode  Zoom  Display format Snapshot  ertical and Horizontal Control  Channel ON/OFF Vertical axis zooming  Roll Mode  nalysis Functions  Power parameters calculation  Automated measurement of Waveform parameters  Statistical processing  Cyclic statistical processing  User defined computation (MATH)  User defined computation (numeric)	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations): The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/dv. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar aclulated from the Voltage, Current and Power values Up to 24 items can be displayed P-P, Amp, Max, Min, Hgh, Low, Avg, Mid, Rms, Sdev, +OvrShoot, -OvrShoot, Ree, Fail, Freq, Period, +Vioth, -Width, Duty, Pulse,Burstt, Burst2, AvgFreq, AvgPeriod, IntTY, Int2Y, Int1XY, Int1XY (IntegPower/IntegCurrent) Int2NY (IntegPower/IntegCurrent) Application items: Automated measurement values of waveform parameters Statistical items: Max, Min, Avg, Sdv, and Cnt Automatically measures the waveform parameters of the data in the acquisition memory and performs statistical processing on the parameters once per period. Maximum 8 expressions for waveforms MATH1 to MATH8, Maximum 4 Mpoint, regarding Digital filter +, -, *, SHIFT, ABS, SORT, LOG, EXP, NEG, SIN, COS, TAN, ATAN, PH, Dir, DDE, IT, H, ILT, LET, HET, MeXimum 30 expressions, FT to F20 +, -, *, ABS, SORT, LOG, EXP and NEG
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Rol Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters Statistical processing Cyclic statistical processing User defined computation (MATH) User defined computation	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations): The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/dv. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar aclulated from the Voltage, Current and Power values Up to 24 items can be displayed P-P, Amp, Max, Min, Hgh, Low, Avg, Mid, Rms, Sdev, +OvrShoot, -OvrShoot, Ree, Fail, Freq, Period, +Vioth, -Width, Duty, Pulse,Burstt, Burst2, AvgFreq, AvgPeriod, IntTY, Int2Y, Int1XY, Int1XY (IntegPower/IntegCurrent) Int2NY (IntegPower/IntegCurrent) Application items: Automated measurement values of waveform parameters Statistical items: Max, Min, Avg, Sdv, and Cnt Automatically measures the waveform parameters of the data in the acquisition memory and performs statistical processing on the parameters once per period. Maximum 8 expressions for waveforms MATH1 to MATH8, Maximum 4 Mpoint, regarding Digital filter +, -, *, SHIFT, ABS, SORT, LOG, EXP, NEG, SIN, COS, TAN, ATAN, PH, Dir, DDE, IT, H, ILT, LET, HET, MeXimum 30 expressions, FT to F20 +, -, *, ABS, SORT, LOG, EXP and NEG
Acquisition mode  Zoom  Display format Snapshot  ertical and Horizontal Control  Channel ON/OFF Vertical axis zooming  Roll Mode  nalysis Functions  Power parameters calculation  Automated measurement of Waveform parameters  Statistical processing  Cyclic statistical processing  User defined computation (MATH)  User defined computation (numeric)	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/dv. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values an calculated from the Voltage, Current and Power values Up to 24 items can be displayed P-P, Amp, Max, Min, High, Low, Avg, Mid, Rms, Sdev, +Ow/Shoot, -Ow/Shoot, Res, Fall, Freq, Period, +With, -Width, Dutty, PuseBurst, Buest2, AvgFreq, AvgPeriod, Int1TY, Int2TY, Int1XY, Int1XY, Int1XY (IntegPower/IntegCurrent) Int2KY (IntegPower/IntegCurrent) Application items: Automated measurement values of waveform parameters statistical items: Max, Min, Avg, Sdv, and Cnt Automatically measures the waveforms MATH1 to MATH8, Maximum 4 Mpoint, regarding Digital filter +, -, *, SHET, AbS, SORT, LOG, EXP, NEG, SM, COS, TAN, ATAN, PH, DP, DPE, INTG, INTG, BIN, SGR, CUEE, F1, P, FY, PWHH, PWH, PWH, PWL, PWW, DUF, DHF, INTG, INTG, BIN, SGR, CUEE, F1, P, FY, PWHH, PWH, PWH, PWL, PWW, DUF, DFE, MTH, SGR, CUEE, F1, P, FY, PWHH, PWH, PWH, PWL, PWW, DUF, DIF, INTG, BIN, SGR, CUEE, F1, P, FY, PWHH, PWH, PWH, PWL, PWD, TRENDF, _HH, _LL, _XX and ZC Maximum 20 expressions, F1 to F20 +, -, *, ABS, SORT, LOG, EXP and NEG
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters Statistical processing Cyclic statistical processing User defined computation (MATH) User defined computation (numeric) De-sclew function	f: unit kHz display Normal Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to ×100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/div. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar calculated from the Voltage, Current and Power values Up to 24 items can be displayed PP. Amp, Max, Min, Higt, Low, Avg, Midt, Rms, Sdev, +OvrShoot, -OvrShoot, Res, Fall, Freq, Period, +Width, -Width, Duty, Pulse,Burstt, Burst2, AvgFreq, AvgPeriod, IntTY, IntTY, IntTXY, InttXY (IntegPower/IntegCurrent) Int2hXY (IntegPower/IntegCurrent) Application items: Automated measurement values of waveform parameters Statistical items: Max, Min, Ayg, Sdv, and Cnt Automatically measures the waveform parameters of the data in the acquisition memory and performs statistical processing on the parameters Statistical items: Max, Min, Ayg, Sdv, and Cnt Maximum 8 expressions for waveforms MATH1 to MATH8, Maximum 4 Mpoint, regarding Digital filter +, -, *, SHIFT, ABS, SORT, LOG, EXP, NEG, MiEANI, LS, PS, PSD, CS, TF, CH, MAG, LOGMAG, PHASE, REAL, IMAG THEND, TRENDM, TRENDD, TRENDE, HH, LL, _XX and 2C Maximum 20 expressions. F1 to F20 +, -, *, /, AES, SQRT, LOG, EXP and NEG Compensate the phase difference betwee
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Pol Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters Statistical processing Cyclic statistical processing User defined computation (MATH) User defined computation (rumeric) De-sckew function GO/NO-GO determination	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/dv. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values an calculated from the Voltage, Current and Power values Up to 24 items can be displayed P.P, Amp, Max, Min, High, Low, Avg, Mid, Rms, Sdev, +OvrShoot, -OvrShoot, Negrevid, IntTY, htt2Y, InttXY, InttXY (IntegPower/IntegCurrent) Int2NY (IntegPower/IntegCurrent) Application times: Automated measurement values of waveform parameters Statistical items: Max, Min, Avg, Sdv, and Cnt Automatically measures the waveforms MATH1 to MATH8, Maximum 4 Mooint, regarding Digital filter +, -, *, 'A, Bur, LOG, EXP, NEG, SiN, COS, TAN, ATAN, PH, DIF, DDIF, INTG, INTG, IBN, SGR, UGBE, FI, F2, FV WH4H, PWH4, PWH4, PWL4, PWL4, PW2A, LOGMAG, LOGMAG, PHASE, REAL, IMAG TRENDD, TRENDM, TRENDD, TRENDF, _HH, _LL, _XX and ZC Maximum 20 expressions for waveforms MATH1 to MATH8, Maximum 4 Mooint, regarding Digital filter +, -, *, 'A, AG, LOGMAG, PHASE, REAL, IMAG TRENDD, TRENDM, TRENDD, TRENDF, _HH, _LL, _XX and ZC Maximum 20 expressions for waveforms MATH1 to MATH8, Maximum 4 Mooint, regarding Digital filter +, - +, - +, A
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Rol Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters Statistical processing Cyclic statistical processing User defined computation (MATH) User defined computation (numeric) De-sckew function GO/NO-GO determination ile Functions	f: unit kHz display Normal Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2° steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/div. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values ar calculated from the Voltage, Current and Power values Up to 24 items can be displayed P-P, Amp, Max, Min, Hgi, Low, Avg, Mid, Rms, Sdev, +OvrShoot, -OvrShoot, Rise, Fall, Freq, Period, +Width, Uvty, NutXY (IntegPower/IntegCurrent) Int2hYY (IntegPower/IntegCurrent) Application items: Automated measurement values of waveform parameters Statistical items: Max, Min, Aya, Sdv, and Cnt Automatically measures the waveform parameters of the data in the acquisition memory and performs statistical processing on the parameters Statistical items: Max, Min, Aya, Sdv, and Cnt Maximum 8 expressions for waveforms MATH1 to MATH8, Maximum 4 Mpoint, regarding Digital filter +, -, ', /, SHIFT, ABS, SORT, LOG, EXP, NEG, Compensate the phase difference between voltage and current modules of a power measurement element. Two types of GO/NO-GO determination are available Setup data, Waveform data (including History data), Numeric data and Image data can be saved external media.
Acquisition mode Zoom Display format Snapshot ertical and Horizontal Control Channel ON/OFF Vertical axis zooming Roll Mode nalysis Functions Power parameters calculation Automated measurement of Waveform parameters Statistical processing Cyclic statistical processing User defined computation (MATH) User defined computation (marric) De-sclew function GO/NO-GO determination ile Functions Save	f: unit kHz display Normal: Normal waveform data acquisition Envelop: The peak values are held at the maximum sample rate regardless of the Time/dv setting. Averaging: The number of times to average can be set to 2 to 65536 in 2' steps. Expand the displayed waveform along with the time axis (up to 2 separate locations). The zoom position can be automatically scrolled. 1/2/3/4/6/8/12, and 16 analog waveform windows The currently displayed waveforms can be retained on the screen. Snapshot waveforms can be saved and loaded. Un, In, Pn, AUXn or MATHn can be turned ON and OFF separately × 0.1 to × 100 Upper and lower limits can be used to set the scale. Roll mode is enabled automatically when the trigger mode is set to Auto, Auto Level, Single, or On Start, and the time axis setting is greater than or equal to 100 ms/dv. Calculate Voltage, Current. Power, Delta parameters, frequency and AUX values from captured waveforms Apparent power, reactive power and power factor and those Sigma values an calculated from the Voltage, Current and Power values Up to 24 items can be displayed P.P, Amp, Max, Min, High, Low, Avg, Mid, Rms, Sdev, +OvrShoot, -OvrShoot, Negrevid, IntTY, htt2Y, InttXY, InttXY (IntegPower/IntegCurrent) Int2NY (IntegPower/IntegCurrent) Application times: Automated measurement values of waveform parameters Statistical items: Max, Min, Avg, Sdv, and Cnt Automatically measures the waveforms MATH1 to MATH8, Maximum 4 Mooint, regarding Digital filter +, -, *, 'A, Bur, LOG, EXP, NEG, SiN, COS, TAN, ATAN, PH, DIF, DDIF, INTG, INTG, IBN, SGR, UGBE, FI, F2, FV WH4H, PWH4, PWH4, PWL4, PWL4, PW2A, LOGMAG, LOGMAG, PHASE, REAL, IMAG TRENDD, TRENDM, TRENDD, TRENDF, _HH, _LL, _XX and ZC Maximum 20 expressions for waveforms MATH1 to MATH8, Maximum 4 Mooint, regarding Digital filter +, -, *, 'A, AG, LOGMAG, PHASE, REAL, IMAG TRENDD, TRENDM, TRENDD, TRENDF, _HH, _LL, _XX and ZC Maximum 20 expressions for waveforms MATH1 to MATH8, Maximum 4 Mooint, regarding Digital filter +, - +, - +, A



Computation range	From the specified computation start point until the specified number of points have been computed
Computed points	1 k, 2 k, 5 k, 10 k, 20 k, 50 k, or 100 k
Time windows	Rectangular, Hamming, Hanning, Flat top, or Exponential
uilt-in Printer (/B5 Option)	
Print system	Thermal line dot system
Sheet width	112 mm
torage Functions	
D Card	
Number of slot	1
Maximum capacity	16 GB
Supported cards	SD and SDHC compliant memory card
SB Ports for Peripherals	
Compatible USB storage devices	Mass storage devices that are compliant with USB Mass Storage Class Ver. 1.1
SB Peripheral Interface	
Number of ports	2
Electrical and mechanical	USB Rev. 2.0 compliant
specifications	USD Nev. 2.0 compliant
Supported transfer mode	HS (High Speed, 480 Mbps), FS Full Speed, 12 Mbps), and LS Low Speed, 1.5 Mbps)
put/Output	
XT TRIG IN	21/2
Connector type	BNC
Input level	TTL 100
Minimum pulse width	100 ns
CT TRG OUT	DNO
Connector type	BNC
Output level	5 V CMOS
Logic	Low when a trigger occurs and high after acquisition is completed
	DNO
Connector type	BNC
Input level Minimum pulse width	TTL 50 ns
	50 hs
Connector type	D. Sub 15 pip moontacla
Connector type	D-Sub 15 pin receptacle
Output format	Analog RGB XGA-compliant output 1024 × 768 dots
Output resolution	Approx. 60 Hz Vsync (dot clock frequency: 66 MHz)
obe Power Output (/P4 Optic	
Number of output terminals	4
Output voltage	±12 Vdc
Output current	Total maximum of 1 A
ensor Power Output (/PD2 op	tion)
Number of output terminals	4
	±15 V
Output voltage Output current	±15 V Maximum of 1.8 A/CH
Output voltage	Maximum of 1.8 A/CH
Output voltage Output current	Maximum of 1.8 A/CH
Output voltage Output current me Sync Signal Input (IRIG: /0	Maximum of 1.8 A/CH <b>220 option)</b>
Output voltage Output current <b>me Sync Signal Input (IRIG: /(</b> Input connector	Maximum of 1.8 A/CH <b>220 option)</b> BNC
Output voltage Output current <b>me Sync Signal Input (IRIG: //</b> Input connector Supported IRIG signals Input impedance	Maximum of 1.8 A/CH <b>220 option)</b> BNC A002, B002, A132, and B122
Output voltage Output current <b>me Sync Signal Input (IRIG: //</b> Input connector Supported IRIG signals	Maximum of 1.8 A/CH <b>220 option)</b> BNC A002, B002, A132, and B122 Can be switched between 50 Ohm and 5 kOhm.
Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impediance Maximum input voltage P-IB	Maximum of 1.8 A/CH <b>220 option)</b> BNC A002, B002, A132, and B122 Can be switched between 50 Ohm and 5 kOhm.
Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage	Maximum of 1.8 A/CH C20 option) BNC A002, B002, A132, and B122 Can be switched between 50 Ohm and 5 kOhm. ±8 V
Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type	Maximum of 1.8 A/CH <b>520 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector
Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)
Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage >-IB Connector type Electrical specification Functional specification Protocol	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO
Output voltage Output voltage Utput current Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Functional specification Protocol	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO
Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Functional specification Frotocol thermet	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 KOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, and C0           IEEE St'd 488.2-1992
Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input inpedance Maximum input voltage P-IB Connector type Electrical specification Functional specification Protocol herret Connector type	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, and C0           IEEE St'd 488.2-1992           RJ-45 modular jack
Output voltage Output current The Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Frotocol hemret Connector type Transmission system Communication protocols	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO           IEEE St'd 488.2-1992           RJ-45 modular jack           Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)
Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Functional specification Protocol thernet Connector type Transmission system	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO           IEEE St'd 488.2-1992           RJ-45 modular jack           Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)
Output voltage Output current The Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Protocol thermet Connector type Transmission system Communication protocols SB	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE Stid 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO           IEEE Stid 488.2-1992           RJ-45 modular jack           Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)           TCP/IP
Output voltage Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Functional specification Functional specification Fransmission system Communication protocols SB Connector type	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO           IEEE St'd 488.2-1992           RJ-45 modular jack           Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)           TCP/IP           USB type B receptacle
Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Frotocol herret Connector type Transmission system Communication protocols SB Connector type Electrical and mechanical	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO           IEEE St'd 488.2-1992           RJ-45 modular jack           Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)           TCP/IP           USB type B receptacle
Output voltage Output voltage Output current  me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Frotocol hernet Connector type Transmission system Communication protocols SB Connector type Electrical and mechanical specifications Supported transfer modes splay Items	Maximum of 1.8 A/CH 220 option) BNC A002, B002, A132, and B122 Can be switched between 50 Ohm and 5 kOhm. ±8 V 24-pin connector Complies with IEEE St'd 488-1978 (JIS C 1901-1987) SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, and C0 IEEE St'd 488.2-1992 RJ-45 modular jack Ethemet (1000 BASE-T, 100 BASE-TX or 10 BASE-T) TCP/IP USB type B receptacle USB Rev. 2.0 compliant
Output voltage         Output current         me Sync Signal Input (IRIG: // Input connector         Supported IRIG signals         Input impedance         Maximum input voltage         >-IB         Connector type         Electrical specification         Functional specification         Fortocol         hernet         Connector type         Transmission system         Communication protocols         SB         Connector type         Electrical and mechanical specifications         specifications         B         Connector type         Electrical and mechanical specifications         Supported transfer modes         Supported transfer Modes         Supported transfer Modes	Maximum of 1.8 A/CH <b>220 option)</b> BNC           A002, B002, A132, and B122           Can be switched between 50 Ohm and 5 kOhm.           ±8 V           24-pin connector           Complies with IEEE St'd 488-1978 (JIS C 1901-1987)           SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, and CO           IEEE St'd 488.2-1992           RJ-45 modular jack           Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)           TCP/IP           USB type B receptacle           USB Rev. 2.0 compliant           HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)
Output voltage           Output current           me Sync Signal Input (IRIG: // Input connector           Supported IRIG signals           Input impedance           Maximum input voltage           >-IB           Connector type           Electrical specification           Functional specification           Protocol           herret           Connector type           Connector type           Electrical specification           Fransmission system           Connector type           Connector type           Connector type           Connector type           Betrical and mechanical specifications           Supported transfer modes           Splay Items           merical Values           Normal	Maximum of 1.8 A/CH 220 option) ENC Can be switched between 50 Ohm and 5 k/Ohm. ±8 V 24-pin connector Complies with IEEE St'd 488-1978 (JIS C 1901-1987) SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DTO, and CO IEEE St'd 488-2-1992 RJ-45 modular jack Ethemet (1000 BASE-T, 100 BASE-TX or 10 BASE-T) TCP/IP USB type B receptacle USB Rev. 2.0 compliant HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps) Measurement functions for each channel (power measurement element)
Output voltage Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Protocol hernet Communication protocols SB Connector type Electrical and mechanical specifications Supported transfer modes splay Items merical Values Normal Voltage (V)	Maximum of 1.8 A/CH <b>220 option)</b> BNC         A002, B002, A132, and B122         Can be switched between 50 Ohm and 5 kOhm.         ±8 V         24-pin connector         Complies with IEEE Stid 488-1978 (JIS C 1901-1987)         SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DTO, and CO         IEEE Stid 488.2-1992         RJ-45 modular jack         Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)         TCP/IP         USB type B receptacle         USB Rev. 2.0 compliant         HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)         Measurement functions for each channel (power measurement element)         Urms: true rms value, Umn: rectified mean value calibrated rms value, Udc: simple average value, Umn; rectified mean value (udc: AC component
Output voltage Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Frotocol termet Connector type Transmission system Communication protocols SB Connector type Electrical and mechanical specifications Supported transfer modes isplay Items mercical Values Normal Voltage (V) Current (A)	Maximum of 1.8 A/CH 220 option) ENC A002, B002, A132, and B122 Can be switched between 50 Ohm and 5 kOhm. ±8 V 24-pin connector Complies with IEEE Std 488-1978 (JIS C 1901-1987) SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, and C0 IEEE Std 488.2-1992 RU-45 modular jack Ethemet (1000 BASE-T, 100 BASE-TX or 10 BASE-T) TCP/IP USB type B receptacle USB Rev. 2.0 compliant HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps) Measurement functions for each channel (power measurement element) Umrs: true ms value, Umr: rectified mean value calibrated rms value, Udc: simple average value, Imr; rectified mean value (Jac: AC component Imrs: true ms value, Imr; rectified mean value, Jac: AC component
Output voltage Output voltage Output current me Sync Signal Input (IRIG: // Input connector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Protocol Hermet Connector type Transmission system Connector type Electrical and mechanical specifications Supported transfer modes isplay Items mercical Values Normal Voltage (V) Current (A) Active Power (W)	Maximum of 1.8 A/CH <b>220 option)</b> BNC         A002, B002, A132, and B122         Can be switched between 50 Ohm and 5 kOhm.         ±8 V         24-pin connector         Comples with IEEE Stid 488-1978 (JIS C 1901-1987)         SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO         IEEE Stid 488.2-1992         RU-45 modular jack         Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)         TCP/IP         USB type B receptacle         USB Rev. 20 compliant         HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)         Measurement functions for each channel (power measurement element)         Urms: true rms value, Urm: rectified mean value calibrated rms value, Udc: simple average value, Urm: rectified mean value calibrated rms value, Udc: simple average value, Urm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean value calibrated rms value, Idc: sinple average value, Irm; rectified mean val
Output voltage           Output current           me Sync Signal Input (IRIG: // Input connector           Supported IRIG signals           Input impedance           Maximum input voltage           P-IB           Connector type           Electrical specification           Functional specification           Protocol           thermet           Connector type           Transmission system           Connector type           Electrical and mechanical specifications           Supported transfer modes           specifications           Supported transfer modes           Mormal           Voltage (V)           Current (A)           Active Power (W)           Apparent Power (VA)	Maximum of 1.8 A/CH <b>220 option)</b> BNC         A002, B002, A132, and B122         Can be switched between 50 Ohm and 5 kOhm.         ±8 V         24-pin connector         Comples with IEEE Std 488-1978 (JIS C 1901-1987)         SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO         IEEE Std 488.2-1992         RU-45 modular jack         Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)         TCP/IP         USB type B receptacle         USB Rev. 2.0 compliant         HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)         Measurement functions for each channel (power measurement element)         Urms: true rms value, Imm: rectified mean value calibrated rms value, Idc: simple average value, Irmm; rectified mean value calibrated rms value, Idc: simple average value, Irmm; rectified mean value calibrated rms value, Idc: simple average value, Irmm; rectified mean value calibrated rms value, Idc: Simple average value, Irmm; rectified mean value calibrated rms value, Idc: simple average value, Irmm; rectified mean value calibrated rms value, Idc: simple average value, Irmm; rectified mean value calibrated rms value, Idc: Simple average value, Irmm; rectified mean value calibrated rms value, Idc: Simple average value, Irmm; rectified mean value calibrated rms value, Idc: Simple average value, Irmm; rectified mean value calibrated rms value, Idc: Simple average value, Irmm; rectified mean value calibrated rms value, Idc: Simple average value, Irmm; rectified mean value calibrated rms value, Idc: Simple average value, Irmm; rectifie
Output voltage           Output current           me Sync Signal Input (IRIG: // Input connector           Supported IRIG signals           Input inpedance           Maximum input voltage           P-IB           Connector type           Electrical specification           Protocol           thermet           Connector type           Electrical specification           Protocol           SB           Connector type           Electrical and mechanical specifications           Supported transfer modes           isplay Items           Warmal           Voltage (V)           Current (A)           Active Power (W)           Apparent Power (Var)	Maximum of 18 A/CH <b>220 option)</b> BNC         A002, B002, A132, and B122         Can be switched between 50 Ohm and 5 kOhm.         ±8 V         24-pin connector         Comples with IEEE Std 488-1978 (JIS C 1901-1987)         SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DTO, and CO         IEEE Std 488.2-1992         RJ-45 modular jack         Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)         TCP/IP         USB type B receptacle         USB type B receptacle         USB Rev. 2.0 compliant         HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)         Measurement functions for each channel (power measurement element)         Urms: true rms value, Umn: rectified mean value calibrated rms value, Udc: simple average value, Imm; rectified mean value calibrated rms value, Udc: simple average value, Imm; rectified mean value calibrated rms value, Udc: simple average value, Imm; rectified mean value, Iac: AC component         Itms: true rms value, Imm; rectified mean value calibrated rms value, Udc: Simple average value, Imm; rectified mean value, Cac: AC component         P       S: selectable of Urms × Irms, Umn × Irm, Udc × Idc, Urmn × Irmn or Umn × Irms <q< td=""></q<>
Output voltage Output voltage Output current me Sync Signal Input (IRIG: // Input ionnector Supported IRIG signals Input impedance Maximum input voltage P-IB Connector type Electrical specification Protocol thernet Connector type Electrical on protocols SB Connector type Electrical and mechanical specifications Supported transfer modes isplay tems umerical Values Normal Voltage (V) Current (A) Active Power (W) Apparent Power (VA) Reactive Power (Var) Power Factor	Maximum of 18 A/CH         220 option)         BNC         A002, B002, A132, and B122         Can be switched between 50 Ohm and 5 kOhm.         ±8 V         24-pin connector         Comples with IEEE St/d 488-1978 (JIS C 1901-1987)         SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO         IEEE St/d 488.2-1992         RJ-45 modular jack         Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)         TCP/IP         USB type B receptacle         USB type B receptacle         USB Rev. 2.0 compliant         HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)         Measurement functions for each channel (power measurement element)         Umm: true ms value, Umm: rectified mean value calibrated rms value, Ldc: simple average value, Imm; rectified mean value calibrated rms value, Ldc: simple average value, Imm; rectified mean value, Lac: AC component         P       S: selectable of Ums × Irms, Umn × Irm, Udc × Idc, Umm × Irmn or Umn × Irms         Q       Lambda (P/S)
Output voltage           Output voltage           Output current           me Sync Signal Input (IRIG: // Input connector           Supported IRIG signals           Input impedance           Maximum input voltage           P-IB           Connector type           Electrical specification           Functional specification           Functional specification           Protocol           thernet           Connector type           Electrical and mechanical specifications           Supported transfer modes           isplay Items           umerical Values           Normal           Voltage (V)           Current (A)           Active Power (W)           Apparent Power (VA)           Reactive Power (Var)           Power Factor	Maximum of 1.8 A/CH 220 option) ENC 220 option) ENC A002, B002, A132, and B122 Can be switched between 50 Ohm and 5 kOhm. ±8 V 24-pin connector Complies with IEEE Stid 488-1978 (JIS C 1901-1987) SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, and C0 IEEE Stid 488.2-1992 RU-45 modular jack Ethemet (1000 BASE-T, 100 BASE-TX or 10 BASE-T) TCP/IP USB type B receptacle USB type B receptacle USB Rev. 2.0 compliant HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps) Measurement functions for each channel (power measurement element) Ums: true ms value, Umn: rectified mean value calibrated rms value, Idc: simple average value, Imm: rectified mean value calibrated rms value, Idc: simple average value, Imm: rectified mean value calibrated rms value, Idc: simple average value, Imm: rectified mean value calibrated rms value, Idc: simple average value, Imm: rectified mean value calibrated rms value, Idc: simple average value, Imm: rectified mean value calibrated rms value, Idc: simple average value, Imm: rectified mean value, Iac: AC component P S: selectable of Ums x Irms, Umn x Irm, Udo x Idc, Urmn x Irmn or Umn x Irms Q Lambda (P/S) Phi (cos <sup>-1</sup> P/S)
Output voltage           Output voltage           Output current           Input connector           Supported IRIG signals           Input impedance           Maximum input voltage           P-IB           Connector type           Electrical specification           Functional specification           Protocol           thermet           Connector type           Transmission system           Connector type           Electrical and mechanical specifications           Supported transfer modes           specifications           Supported transfer modes           Mormal           Voltage (V)           Current (A)           Active Power (W)           Apparent Power (Va)           Power Factor           Phase Angle (deg)           armoric analysis function (/Gigma Items	Maximum of 1.8 A/CH <b>220 option)</b> BNC         A002, B002, A132, and B122         Can be switched between 50 Ohm and 5 kOhm.         ±8 V         24-pin connector         Comples with IEEE St'd 488-1978 (JIS C 1901-1987)         SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO         IEEE St'd 488.2-1992         RU-45 modular jack         Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)         TCP/IP         USB type B receptacle         USB type B receptacle         USB Rev. 2.0 compliant         HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)         Measurement functions for each channel (power measurement element)         Urms: true rms value, Imm: rectified mean value calibrated rms value, Udc: simple average value, Imm; rectified mean value calibrated rms value, Udc: simple average value, Imm; rectified mean value calibrated rms value, Idc: SAC component         P       S: selectable of Urms × Irms, Umn × Irm, Udc × Idc, Urmn × Irmn or Umn × Irms Q         Lambda (P/S)       Phi (cos <sup>-1</sup> P/S)         55 Option)       Soption)
Output voltage         Output current         me Sync Signal Input (IRIG: //         Input connector         Supported IRIG signals         Input impedance         Maximum input voltage         P-IB         Connector type         Electrical specification         Functional specification         Functional specification         Protocol         Ithernet         Connector type         Electrical and mechanical specifications         Supported transfer modes         isplay Items         umerical Values         Normal         Voltage (V)         Current (A)         Apparent Power (VA)         Reactive Power (Va)         Pauer Angle (deg)         armonic analysis function (/Gigna Items         Voltage (V)	Maximum of 1.8 A/CH         220 option)         BNC         A002, B002, A132, and B122         Can be switched between 50 Ohm and 5 kOhm.         ±8 V         24-pin connector         Complies with IEEE Std 488-1978 (JIS C 1901-1987)         SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, and C0         IEEE Std 488.2-1992         RU-45 modular jack         Ethemet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)         TCP/IP         USB type B receptacle         USB Rev. 20 compliant         HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)         Measurement functions for each channel (power measurement element)         Umm: true mms value, Umm: rectified mean value calibrated rms value, Idc: simple average value, Umm; rectified mean value calibrated rms value, Idc: simple average value, Imm; rectified mean value calibrated rms value, Idc: simple average value, Imm; rectified mean value, Iac: AC component         P       S: selectable of Umms x Irms, Umn x Imn, Udc x Idc, Urmn x Irmn or Umn x Irms         Q       Lambda (P/S)         Phi (cos <sup>-1</sup> P/S)       5 Option)         UK/k I-th order voltage true rms value, U: total voltage true rms value
Output voltage           Output voltage           Output current           me Sync Signal Input (IRIG: // Input inpediance           Maximum input voltage           >-IB           Connector type           Electrical specification           Functional specification           Protocol           hernet           Connector type           Transmission system           Connector type           Electrical and mechanical specifications           SB           Connector type           Electrical and mechanical specifications           Supported transfer modes           Sylay Items           umerical Values           Normal           Voltage (V)           Current (A)           Active Power (VA)           Reactive Power (VA)           Peacetor Phase Angle (deg)           armonic analysis function (/G gma Items           Voltage (V)           Current (A)	Maximum of 18 A/CH         220 option)         BNC         A002, B002, A132, and B122         Can be switched between 50 Ohm and 5 kOhm.         ±8 V         24-pin connector         Comples with IEEE Stid 488-1978 (JIS C 1901-1987)         SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DTO, and CO         IEEE Stid 488.2-1992         RJ-45 modular jack         Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)         TCP/IP         USB type B receptacle         USB Rev. 20 compliant         HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)         Measurement functions for each channel (power measurement element)         Urms: true rms value, Imm: rectified mean value calibrated rms value, Udc: simple average value, Irmm; rectified mean value calibrated rms value, Udc: simple average value, Irmm; rectified mean value calibrated rms value, Udc: simple average value, Irmm; rectified mean value, Lac: AC component         P       S: selectable of Urms × Irms, Umm × Irm, Udc × Idc, Urmm × Irmn or Umm × Irms         Q       Lambda (P/S)         Phi (cos <sup>-1</sup> P/S)       5         5 Option)       Ukjk I-th order voltage true rms value, I: total voltage true rms value When k=0, it shows DC component
Output voltage         Output current         met Sync Signal Input (IRIG: //         Input connector         Supported IRIG signals         Input impedance         Maximum input voltage         P-IB         Connector type         Electrical specification         Functional specification         Functional specification         Protocol         hernet         Connector type         Electrical and mechanical specifications         Supported transfer modes         ispecifications         Supported transfer modes         ispecifications         Supported Values         Normal         Voltage (V)         Current (A)         Active Power (VA)         Reactive Power (VA)         Reactive Power (VA)         Paparent Power (VA)         Paparent Power (VA)         Pause Angle (deg)         armonic analysis function (/G         gma Items         Voltage (V)	Maximum of 1.8 A/CH         220 option)         BNC         A002, B002, A132, and B122         Can be switched between 50 Ohm and 5 kOhm.         ±8 V         24-pin connector         Comples with IEEE St'd 488-1978 (JIS C 1901-1987)         SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT0, and CO         IEEE St'd 488.2-1992         RU-45 modular jack         Ethernet (1000 BASE-T, 100 BASE-TX or 10 BASE-T)         TCP/IP         USB type B receptacle         USB type B receptacle         USB Rev. 2.0 compliant         HS (High Speed, 480 Mbps) and FS Full Speed, 12 Mbps)         Measurement functions for each channel (power measurement element)         Urms: true rms value, Imm: rectified mean value calibrated rms value, Udc: simple average value, Irmm; rectified mean value calibrated rms value, Udc: simple average value, Irmm; rectified mean value, Lac: AC component         Ims: true rms value, Imm; rectified mean value calibrated rms value, Idc: simple average value, Irmm; rectified mean value, Lac: AC component         P       S: selectable of Urms × Irms, Umn × Irm, Udc × Idc, Urmn × Irmn or Umn × Irms         Q       Lambda (P/S)         Phi (cos <sup>-1</sup> P/S)       5 Option)         U(k): k-th order voltage true rms value, Ut total voltage true rms value         When k=0, it shows DC component         (k): k-th order cu

		Yokogawa
Reactive Power (Var)		Q(k): k-th order reactive power value, Q: total reactive power value When k=0, it shows 0 $$
Power Factor		Lambda(k): k-th order power factor value, Lambda: total power factor value
Phase Angle (deg)		Phi(k): Phase angle between k-th order voltage and current, Phi: Phase angl of current refers to voltage waveform PhiU(k): Phase angle of k-th order voltage refers to the fundamental voltage Phil(k): Phase angle of k-th order current refers to the fundamental current (
Ita Function		· · · · · · · · · · · · · · · · · · ·
Voltage [V]		Delta U1 to Delta U3, and Delta Usigma
Current [A]		Delta I
Power [W]		Delta P1 to Delta P3, and Delta PSigma
X analysis function que and Speed input		
AUX1		Pulse input or Analog input
AUX2 AUX(1×2)		Pulse input or Analog input Mechanical power calculation
curacy		
Accuracy (at 6 months)	Voltage:	Frequency         Accuracy           DC: ±(0.2% of reading + 0.2% of range)           0.1 Hz ≤ f <
		$\begin{array}{l} 10 \mbox{ Hz} \le f < 45 \mbox{ Hz} \pm (0.2\% \mbox{ of reading} + 0.1\% \mbox{ of range}) \\ 45 \mbox{ Hz} \le f \le 10 \mbox{ Hz} \pm 1(0.1\% \mbox{ of range}) \\ 10 \mbox{ Hz} < f \le 00 \mbox{ Hz} \pm 1(0.2\% \mbox{ of range}) \\ 10 \mbox{ Hz} < f \le 50 \mbox{ Hz} \pm 1(0.2\% \mbox{ of randing} + 0.4\% \mbox{ of range}) \\ 50 \mbox{ Hz} < f \le 500 \mbox{ Hz} \pm 1(0.6\% \mbox{ of randing} + 0.4\% \mbox{ of range}) \\ 100 \mbox{ Hz} < f \le 200 \mbox{ Hz} \pm 1(0.6\% \mbox{ of reading} + 0.4\% \mbox{ of range}) \\ 200 \mbox{ Hz} < f \le 200 \mbox{ Hz} \pm 1(0.6\% \mbox{ of reading} + 0.4\% \mbox{ of range}) \\ 200 \mbox{ Hz} < f \le 200 \mbox{ Hz} \pm 1(0.1\% \mbox{ 0.003 x} \mbox{ 1\% \mbox{ of range}}) \\ 400 \mbox{ Hz} < f \le 500 \mbox{ Hz} \pm 1(0.1\% \mbox{ 0.003 x} \mbox{ 1\% \mbox{ of range}}) \\ 500 \mbox{ Hz} < f \le 100 \mbox{ Hz} \pm 1(0.1\% \mbox{ 0.003 x} \mbox{ 1\% \mbox{ of range}}) \\ 10 \mbox{ Hz} < f \le 100 \mbox{ Hz} \pm 1(0.1\% \mbox{ 0.003 x} \mbox{ 1\% \mbox{ of range}}) \\ 10 \mbox{ Hz} < f \le 100 \mbox{ Hz} \pm 1(0.1\% \mbox{ 0.003 x} \mbox{ 1\% \mbox{ of range}}) \\ 10 \mbox{ Hz} < f \le 100 \mbox{ Hz} \pm 1(0.1\% \mbox{ 0.003 x} \mbox{ 1\% \mbox{ of range}}) \\ 10 \mbox{ Hz} < f \le 100 \mbox{ Hz} \pm 1(0.1\% \mbox{ 0.003 x} \mbox{ 1\% \mbox{ of range}}) \\ 10 \mbox{ Hz} < f \le 100 \mbox{ Hz} \pm 1(0.1\% \mbox{ 0.003 x} \mbox{ 1\% \mbox{ of range}}) \\ 10 \mbox{ Hz} < f \le 100 \mbox{ Hz} = 4(0.1\% \mbox{ 0.003 x} \mbox{ 1\% \mbox{ of range}}) \\ 10 \mbox{ Hz} < f \le 100 \mbox{ Hz} = 4.00 \mbox{ 0} $
	Current:	* Accuracy over 1 MHz is design value Direct (up to 5 A) Frequency DC: ±(0.2% of reading + 0.2% of range) + 20 μA 0.1 Hz ≤ f < 10 Hz ±(0.2% of reading + 0.2% of range) 10 Hz ≤ f < 45 Hz ±(0.2% of reading + 0.1% of range) 45 Hz ≤ f ≤ 11 HZ ±(0.1% of reading + 0.1% of range) 10 kHz < f ≤ 100 kHz ±(0.2% of reading + 0.2% of range) 50 kHz < f ≤ 100 kHz ±(0.2% of reading + 0.2% of range) 10 kHz < f ≤ 100 kHz ±(0.2% of reading + 0.2% of range) 50 kHz < f ≤ 200 kHz ±(0.2% of reading + 0.4% of range) 100 kHz < f ≤ 200 kHz ±(0.6% of reading + 0.4% of range) 200 kHz < f ≤ 500 kHz ±(0.1% 0.004 × 1%)% of reading + 0.4% of range) 400 kHz < f ≤ 100 kHz ±(0.1% 0.004 × 1%)% of reading + 0.4% of range) 400 kHz < f ≤ 100 kHz ±(0.1% 0.004 × 1%)% of reading + 0.4% of range) 400 kHz < f ≤ 100 kHz ±(0.1% 0.004 × 1%)% of reading + 0.4% of range) 400 kHz < f ≤ 100 kHz ±(0.1% 0.004 × 1%)% of reading + 0.4% of range) 400 kHz < f ≤ 100 kHz ±(0.1% 0.004 × 1%)% of reading + 0.4% of range) 400 kHz < f ≤ 100 kHz ±(0.1% 0.004 × 1%)% of reading + 0.4% of range)
		* Measurement bandwidth 10 MHz (-3 dB, Typical) Sensor Frequency Accuracy DC: ±(0.2%) of reading + 0.2% of range) + 50 μV 0.1 Hz ≤ f < 10 Hz: ±(0.2% of reading + 0.2% of range) 10 Hz ≤ f < 45 Hz: ±(0.2% of reading + 0.1% of range) 45 Hz ≤ f ≤ 1 kHz: ±(0.1% of reading + 0.1% of range) 1 kHz < f ≤ 10 kHz: ±(0.1% of reading + 0.1% of range) 10 kHz < f ≤ 50 kHz: ±(0.2% of reading + 0.2% of range)
		$ \begin{array}{l} 50 \ kHz < f \le 100 \ kHz \pm (0.6\% \ of reading + 0.4\% \ of range) \\ 100 \ kHz < f \le 200 \ kHz \pm (0.6\% \ of reading + 0.4\% \ of range) \\ 200 \ kHz < f \le 400 \ kHz \pm (1\% \ of reading + 0.4\% \ of range) \\ 400 \ kHz < f \le 500 \ kHz \pm (1\% \ of reading + 0.4\% \ of range) \\ 500 \ kHz < f \le 10 \ kHz \pm (0.1 + 0.003 \times f^{+})\% \ of reading + 0.4\% \ of range) \\ 1 \ MHz + (f \le 10 \ MHz \pm (0.1 + 0.003 \times f^{+})\% \ of reading + 4\% \ of range) \\ ^{*} \ Massurement \ bandwidth 20 \ ME (-3 \ dB, Typica) \end{array} $
	Power:	* Accuracy over 1 MHz is design value Direct (up to 5 A) Frequency Accuracy DC: ±(0.2% of reading + 0.4% of range) + 20 µA ×
		$\begin{array}{l} 0.1 \mbox{ Hz} \le f < & 10 \mbox{ Hz} \pm (0.2\% \mbox{ of reading} + 0.2\% \mbox{ of range}) \\ 10 \mbox{ Hz} \le f < & 45 \mbox{ Hz} \pm (0.2\% \mbox{ of randing} + 0.1\% \mbox{ of range}) \\ 45 \mbox{ Hz} \le f < & 10 \mbox{ Hz} \pm (0.1\% \mbox{ of randing} + 0.16\% \mbox{ of range}) \\ 1 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.2\% \mbox{ of reading} + 0.2\% \mbox{ of range}) \\ 10 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.2\% \mbox{ of reading} + 0.2\% \mbox{ of range}) \\ 50 \mbox{ Hz} \le f \le & 100 \mbox{ Hz} \pm (0.2\% \mbox{ of reading} + 0.4\% \mbox{ of range}) \\ 100 \mbox{ Hz} \le f \le & 200 \mbox{ Hz} \pm (1.5\% \mbox{ of reading} + 0.6\% \mbox{ of range}) \\ 200 \mbox{ Hz} \le f \le & 200 \mbox{ Hz} \pm (1.5\% \mbox{ of reading} + 0.6\% \mbox{ of range}) \\ 200 \mbox{ Hz} \le f \le & 500 \mbox{ Hz} \pm (1.5\% \mbox{ of reading} + 0.6\% \mbox{ of range}) \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of reading} + 0.6\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} \pm (0.1 + 0.006 \times f^{\circ})\% \mbox{ of range} \\ 500 \mbox{ Hz} \le f \le & 10 \mbox{ Hz} = f \mbox{ of range} \mbox{ of range} \\ 500 \mbox{ Hz} \le f \mbox{ of range} $
		$ \begin{array}{llllllllllllllllllllllllllllllllllll$
neral specifications		<ul> <li>The unit of f in the equation for the reading error is (kHz).</li> <li>These accuracies apply when the power factor = 1.</li> <li>For the complete specifications, please refer to the separate document, Bulletin PX8000-02EN.</li> </ul>
Standard operating cor	iditions	Ambient temperature: 23 $\pm5^\circ$ C, Ambient humidity: 20 to 80%/RH, Supply Voltage and frequency Within $\pm\%$ of rating, Altitude: 2000 m or less After the PX8000 has been warmed up for 30 minutes and then calibration has been performed.
Rated supply voltage		100 to 120 VAC / 220 to 240 VAC (Auto switching)
Rated supply frequency		50/60 Hz
Maximum power consu	mption	200 VA, 400 VA (installed /PD2 option)
Weight		Approx. 6.5 kg (weight of the PX8000 only without paper and /M2, /B5, /C2 /G5 and /P4 options) Approx. 7.5 kg (with /B5/C20/G5/M2/P4 and /PD2 options, without paper f printer)
Withstand voltage		1500 VAC for one minute between the power supply and case
will island vollage		

Model	Suffix Code	Description
PX8000		Precision Power Scope
Power Cord	-D	UL/CSA Standard
	-F	VDE standard
	-H	GB standard
	-N	NBR standard
	-Q	BS standard
	-R	AS standard
Languages	-HE	English menu
	-HG	German menu
	-HJ	Japanese menu
Options	/B5	Built-in printer (112 mm)
	/C20	IRIG function
	/G5	Harmonic measurement
	/M1	50 M memory expansion <sup>11</sup>
	/M2	100 M memory expansion <sup>*1</sup>
	/P4	4 Outputs of probe power
	/PD2	4 Outputs of sensor power <sup>2</sup>

\*1: Only one can be selected

2: When use Shunt resistor Box for measurement, /PD2 option and Current module 760812 are required. The /PD2 option requires Firmware version Ver. 3.2 or later

Name	Model	Description
Voltage Module	760811	Current module 760812 of 760813 must be ordered together
Current Module	760812	Voltage module 760811 must be ordered together
Current Module	760813	Voltage module 760811 must be ordered together
Auxiliary Module	760851	Auxiliary (AUX) module for sensor input, Torque/Speed


#### Name PowerViewerPlus 760881 Viewer software dedicated for PX8000

The German language menu will be released soon


- Selection of both /M1 and /M2 is not available for one main frame. The standard memory length is 10 M points/CH
- The power value will be calibrated using a pair of Voltage (760811) and Current (760812/760813) modules, therefore an equal quantity of these must be ordered together.
- A test Certificate of the Voltage Module includes the test results of the voltage and power values which are calibrated with one paired Current Module. Also the test Certificate of the Current Module includes the test results of the current and power values which are calibrated with one paired Voltage Module

#### Standard Accessories:

Power cord (1 set), Front cover (1 set), Rubber foot (4 sets), Cover plate assy (8 sets), Current terminal adapter (4 sets), Voltage terminal adapter (4 sets), Printer chart (1 set for /B5), Getting started guide (1 set), CD (Getting started guide, Futures guide, User's Manual, Communication interface manual by PDF data)

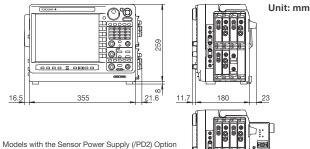

\* A stand is not available on models with the sensor power (/PD2) option. Tilting is not possible.



Safety Precautions for Laser Products The voltage module (760811), the current modules (760812/760813) and the AUX module (760851) uses laser light sources internally. These modules or respond to Class 1 laser product as defined in the IEC60825-1: 2007 Safety of Laser Products-Part 1: Equipment Classification and Requirements



#### For the full specifications see Bulletin PX8000-02EN or tmi.yokogawa.com/px8000

Model num	ıber	Product	Description
366924	<b>A</b> -1	BNC-BNC Cable	1 m
	A 1	BNC-BNC Cable	2 m
	A 1	1:1 BNC-Alligator Cable	Non-isolated 42 V or less 1 m
366961	<u>A</u> "1	1:1 Banana-Alligator Cable	Non-isolated 42 V or less 1.2 m
700924	_	Differential Probe	1400 Vpk, 1000 Vrms-CAT II
700929		10:1 Probe	1000 V (DC+ACpeak) CAT I
		(for isolation BNC input)	
701901		1:1 Safety BNC Adapter Lead	1000 Vrms-CAT II
		(in combination with followings)	
701902		Safety BNC-BNC Cable (1 m)	1000 Vrms-CAT II (BNC-BNC)
701903		Safety BNC-BNC Cable (2 m)	1000 Vrms-CAT II (BNC-BNC)
701906		Long Test Clip	For 700924 and 701926
701926		Differential Probe	Maximum 7000 Vpk, 5000 Vrms
701947		100:1 Isolation Probe	1000 V (DC+ACpeak) CAT I
701948		Plug-On Clip	For 700929 and 701947
701954		Large Aligator-Clip (Dolphin type)	1000 Vrms-CAT II, 1 set each of red and black
701959		Safety Mini-Clip (Hook type)	1000 Vrms-CAT II, 1 set each of red and black
701963		Soft Carrying Case	For PX8000
720911		External I/O Cable	For external I/O connection
758917		Test Lead Set	A set of 0.8 m long, red and black test leads
758921	$\wedge$	Fork Terminal Adapter	Banana-fork adapter, Two adapters to a set
758922	$\mathbb{A}$	Small Alligator-clip	Rated at 300 V and used in a pair
758923		Safety Terminal Adapter	(spring-hold type) Two adapters to a set
758929	$\mathbb{A}$	Large Alligator-clip	Rated at 1000 V and used in a pair
CT60		AC/DC Current Sensor	Maximum 60 Apk, DC to 800 kHz (-3 dB)
CT200		AC/DC Current Sensor	Maximum 200 Apk, DC to 500 kHz (-3 dB)
CT1000		AC/DC Current Sensor	Maximum 1000 Apk, DC to 300 kHz (-3 dB)
CT2000A		AC/DC Current Sensor	Maximum 2000 Arms, DC to 40 kHz (-3 dB)

Parts number	Product	Description Order 0	Q'ty
A1323EZ	Shunt Resistor Box	5 Ω ±0.05%	1
A1324EZ	Shunt Resistor Box	10 Ω ±0.02%	1
A1325EZ	Shunt Resistor Box	20 Ω ±0.02%	1
A1559WL	Current sensor cable	Cable length 3 m for Shunt Resistor Box	1
A1560WL	Current sensor cable	Cable length 5 m for Shunt Resistor Box	1
A1589WL	Current Sensor Direct Cable	Cable length 3 m (Burden resistor 2.7 Ω)	1
A1628WL	Current Sensor Direct Cable	Cable length 5 m (Without Burden resistor)	1
B8213ZA	Safety Terminal Adapter	(screw-fastened type) Two adapters to a set for current	4
B8213ZD	Safety Terminal Adapter	(screw-fastened type) Two adapters to a set for voltage	4
B9284LK 🛕	External Sensor Cable	Current sensor input connector, Length 0.5 m	1
B9317WD	Wrench	For B8213ZD and B8213ZA	1
B9988AE	Printer Roll Paper	For PX8000, 10 m × 10	1

▲ Due to the nature of this product, it is possible to touch its mental parts. Therefore. there is a risk of electric shock, so the product must be used with caution.

\*1: Use these products with low-voltage circuits (42 V or less).

#### Yokogawa's approach to preserving the global environment

- Yokogawa's electrical products are developed and produced in facilities that have received ISO14001 approval.
- In order to protect the global environment, Yokogawa's electrical products are designed in accordance with Yokogawa's Environmentally Friendly Product Design Guidelines and Product Design Assessment Criteria.

#### Notice

- Before operating the product, read the user's manual thoroughly for proper and safe operation.
- If this product is for use with a system requiring safeguards that directly involve
- personnel safety, please contact the Yokogawa offices.
- Warranty period of the PX8000 and modules is three years.

This is a Class A instrument based on Emission standards EN61326-1 and EN55011, and is designed for an industrial environment.

Operation of this equipment in a residential area may cause radio interference, in which case users will be responsible for any interference which they cause

Any company's names and product names mentioned in this document are trade names, trademarks or registered trademarks of their respective companies. The User's Manuals of this product are provided by CD-ROM.

is trademark of Yokogawa Electric Corporation.

http://tmi.yokogawa.com/

### YOKOGAWA

#### YOKOGAWA METERS & INSTRUMENTS CORPORATION

Global Sales Dept. /Phone: +81-422-52-6237 E-mail: tm@cs.jp.yokogawa.com Facsimile: +81-422-52-6462

#### YOKOGAWA CORPORATION OF AMERICA YOKOGAWA FUROPE B V

YOKOGAWA SHANGHAI TRADING CO., LTD. YOKOGAWA ELECTRIC KOREA CO., LTD. YOKOGAWA ENGINEERING ASIA PTE. LTD. YOKOGAWA INDIA LTD. YOKOGAWA ELECTRIC CIS LTD. YOKOGAWA AMERICA DO SUL LTDA.

YOKOGAWA MIDDLE EAST & AFRICA B.S.C(c) Phone: +973-17-358100

Phone: +31-88-4641000 Phone: +86-21-6239-6363 Phone: +82-2-2628-3810 Phone: +65-6241-9933 Phone: +91-80-4158-6396 Phone: +7-495-737-78-68 Phone: +55-11-5681-2400

E-mail: tmi@us.yokogawa.com E-mail: tmi@nl.yokogawa.com E-mail: tech@ysh.com.cn

E-mail: TMI@sg.yokogawa.com E-mail: tmi@in.yokogawa.com E-mail: info@ru.yokogawa.com

E-mail: help.ymatmi@bh.yokogawa.com Facsimile: +973-17-336100

YMI-KS-MI-SE04

Subject to Change without notice. Copyright © 2014, Yokogawa Meters & Instruments Corporation [Ed: 04/b] Printed in Japan, 706(KP)

> Facsimile: +86-21-6880-4987 Facsimile: +82-2-2628-3899 Facsimile: +65-6241-9919 Facsimile: +91-80-2852-1442 Facsimile: +7-495-737-78-69